

## How to Use the BLOCKA System

1


For each Washout, have 1 Blocka Plate and 2 Blocka Ties ready, along with the Blocka Cable Tensioner.

2



Always fasten the flat side of the Blocka Plate against the masonry wall. Strengthening ribs must face away from the wall.

3

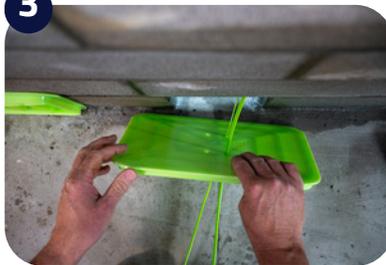

Thread each Blocka Tie through the one opening of the Blocka Plate.

4



Wrap the Blocka Tie around a reinforcing rod.

5



Thread the Blocka Tie back through the second opening.

6



Connect the Blocka Tie and pull it as tightly as possible.

7



Always use the Blocka Cable Tensioner.

8



When both Blocka Ties are tight, the Blocka Plate is now firmly secured against the masonry wall, ready for block fill.

9

After at least one hour after the concrete is poured (when you can see it has set), cut the Blocka Tie and remove the Blocka Plate for reuse.

10

Brush or wash off any residual concrete on the Blocka Plate before storing to extend the life of the Blocka Plates.

## Product Specifications

- Blocka Plates: 20 per box, each Plate reusable up to 25 times
- Blocka Ties: Bag of 100, usage = 2 ties per washout (20 ties per Plate = 10 uses)
- Blocka Cable Tensioner: 1 per Starter Pack



### Attention

**Do not secure Blocka Ties through the upper openings only. Always use 2 Blocka Ties per washout. Failure to follow the Blocka System instructions completely may lead to the Blocka Plate separating from the wall and causing a block fill leak.**