

# GARDEN WALL

## DIY RETAINING GUIDE

### HOW HIGH


Keystone Garden Wall retaining walls can be constructed to a maximum height of 700mm, this system cannot take any loading or surcharge on the retained area behind the wall.

### INSTALLATION

- Starting at the lowest point dig a trench 450mm wide and 100mm deep. If on sloping ground step the trench in 100mm increments. The blocks must be level, do not follow the contour of the ground
- Place 100mm GAP20 in the trench and level and compact. Ensure there is at least 50mm embedment for the Garden wall unit
- On the first course, knock the lip off the back of the Garden wall unit using a hammer and bolster. Place the blocks lip side down and level the unit front-to-back and side-to-side using a level. Use a straight edge and level to ensure alignment along the wall.
- Place a 75mm novaflo along the back of the block and cover with drainage material to 150mm from back of block
- Sweep the first course of blocks clean and place the second course in a stretcher bond pattern, ensuring the lip of the upper unit is placed over the back of the lower unit. Place drainage aggregate behind wall and backfill behind each course as required
- Continue this process until finished wall height is reached

### ESTIMATING TABLE

Wall Height	Wall Length						
	1m	2m	3m	4m	5m	10m	20m
0.1m (1 course)	4	7	10	13	17	33	66
0.2m (2 courses)	7	14	20	26	33	66	133
0.3m (3 courses)	11	21	30	39	50	99	198
0.4m (4 courses)	14	28	40	52	66	132	264
0.5m (5 courses)	18	35	50	65	83	165	330
0.6 m (6 courses )	21	42	60	78	99	198	396

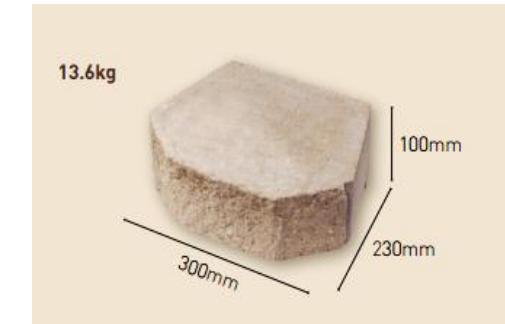


..Medium sized block, approx. 13kgs

..Build straight, curved or terraced walls

..Very simple to install, 3.3 units per lineal meter or 33 units per m2

### Garden Wall Cross Section

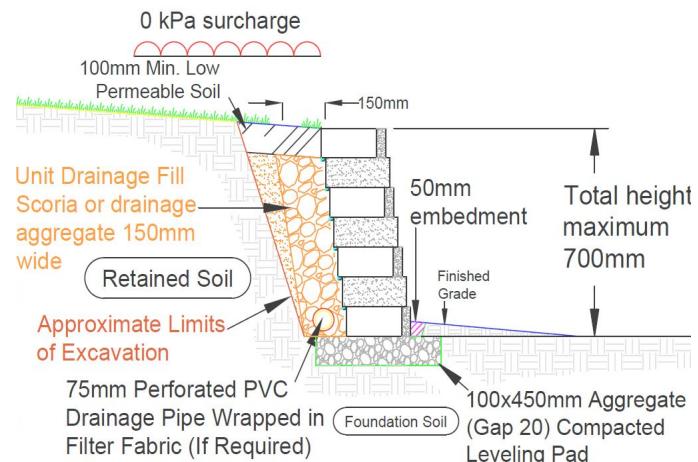

**0800 FIRTH 1**  
[firth.co.nz](http://firth.co.nz)